
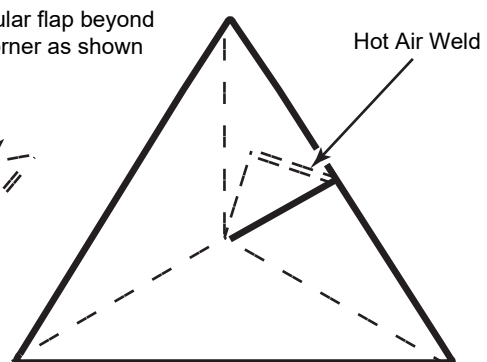
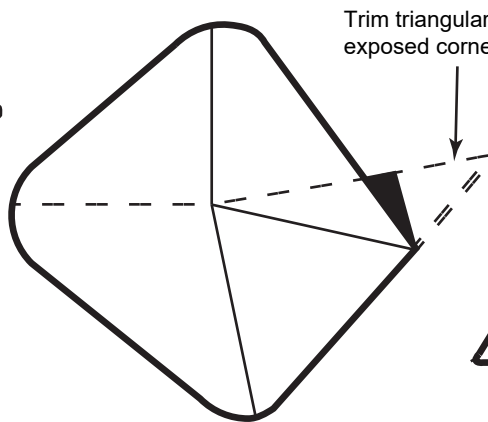
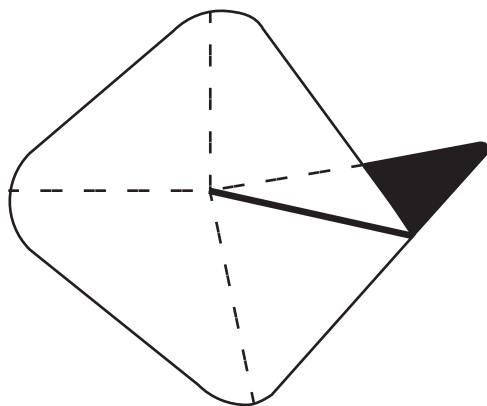
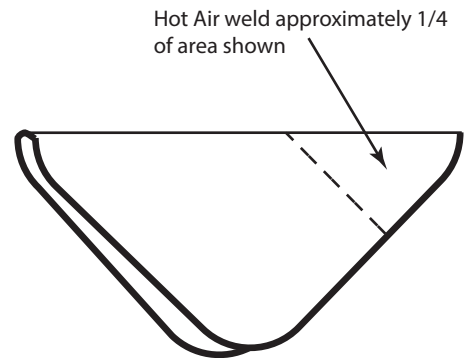
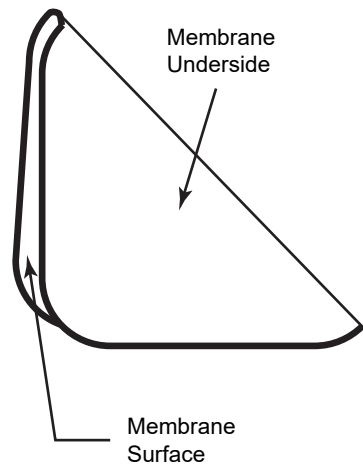


- Notes: 1. Perimeter membrane fastening should be started within 15cm (6") of corner.
 2. Hi-Tuff TPO Cut Edge Sealant is required on cut edges of Hi-Tuff TPO membrane.

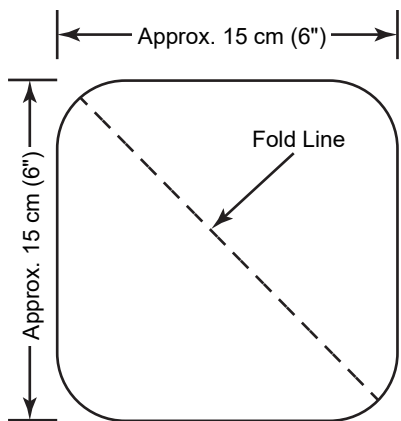

**Inside Corner
Roofing System Detail**

Scale: Not to scale
 Date: August, 2016
 Detail No.: H-S-301