



Tape Overlaps

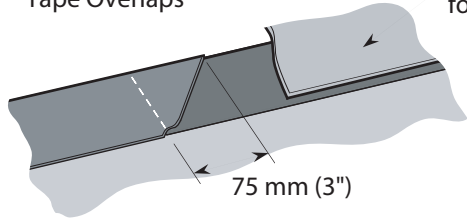

Top membrane cut away for illustration purposes only.

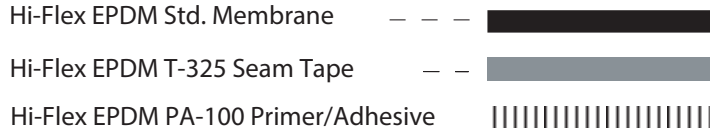

Comments: EPDM splice area must be cleaned with Lexcan Weathered Membrane Cleaner, when using Hi-Flex SA-747 Splice Adhesive, prior to joint fabrication. When using Hi-Flex EPDM PA-100 Primer/Adhesive, Lexcan Weathered Membrane Cleaner is not required (under normal conditions). Lap Sealant is required in certain flashing applications.



Standard Lexseam™ Seam
Roofing System Detail

Scale: Not to scale

Date: August, 2016

Detail No.: L-S-001