



## Special DESIGN B & C (Loose Laid & Ballasted Assembly) Details

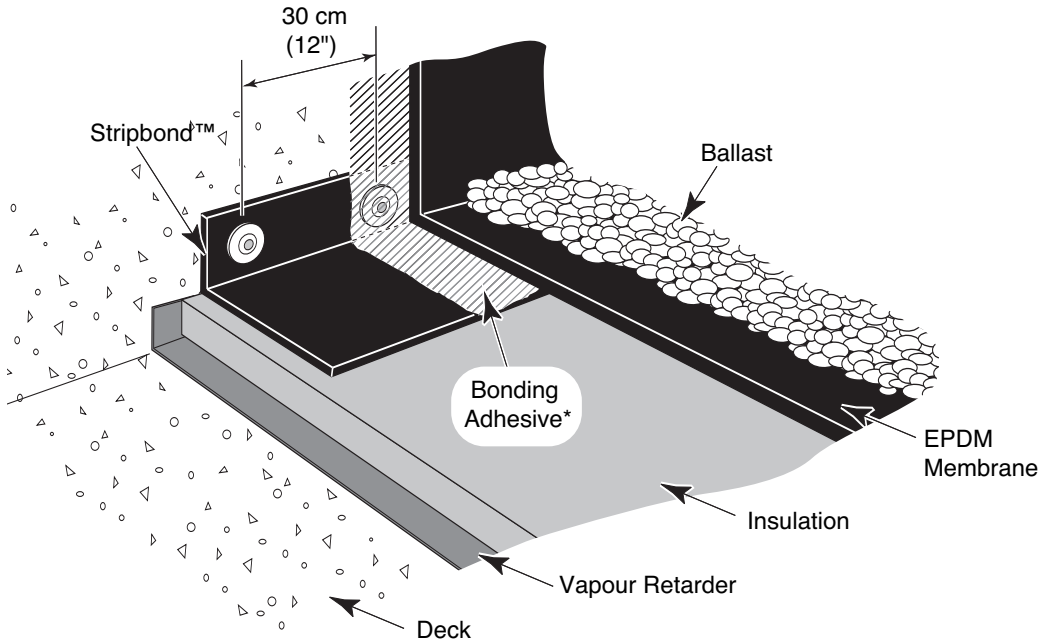

- Comments:**
1. Secure the Stripbond™ strip to the deck on 30 cm (12") centres, with Lexgrip™ fasteners and Round 3" Plates. Fasteners are to be 5 cm (2") from the outside edge of the strip.
  2. Clean the Stripbond™ strip and underside of roofing membrane over strip area with Seam Cleaner
  3. Adhere the roofing membrane down the parapet/curb and onto the Stripbond™ strip with Bonding Adhesive\*.
- Refer to Stripbond™ Method 2 - Laps and Corners (L-S-112b)

\* Caution: In Canada, Splice Adhesive must be used in lieu of Bonding Adhesive on the strip area when a vapour retarder is not present.

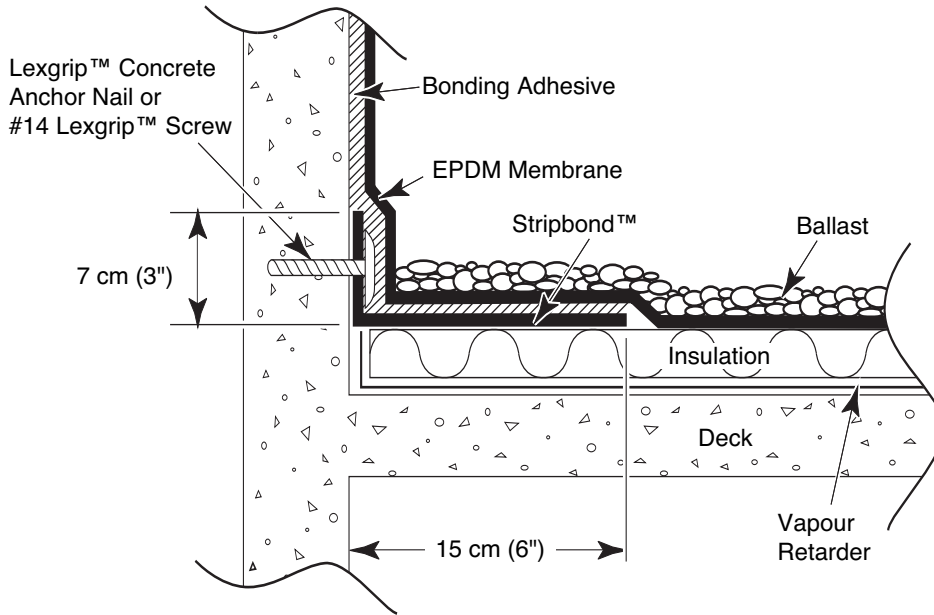

### Stripbond™ Method 2 (Securement to Parapet)

ROOFING SYSTEMS DETAIL

Scale: Not to Scale

Date: January, 1996

Detail No.: L-S-112