
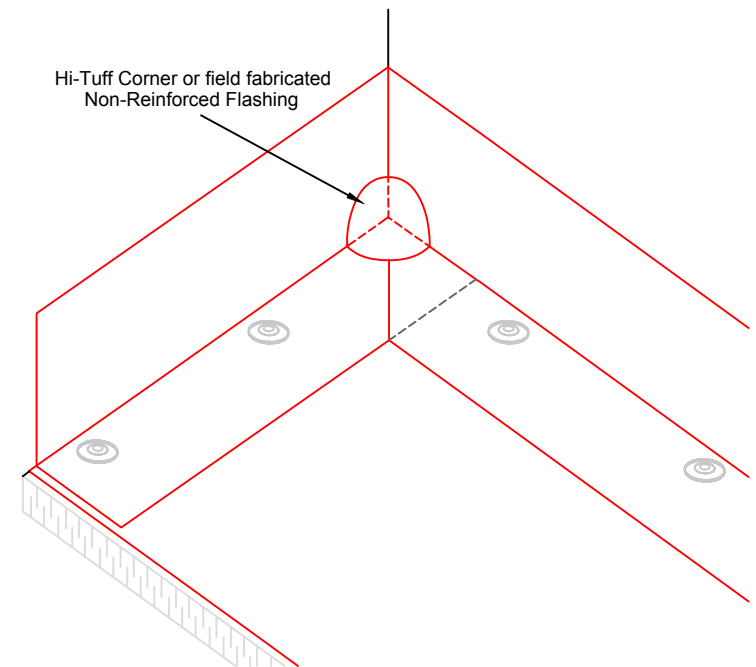
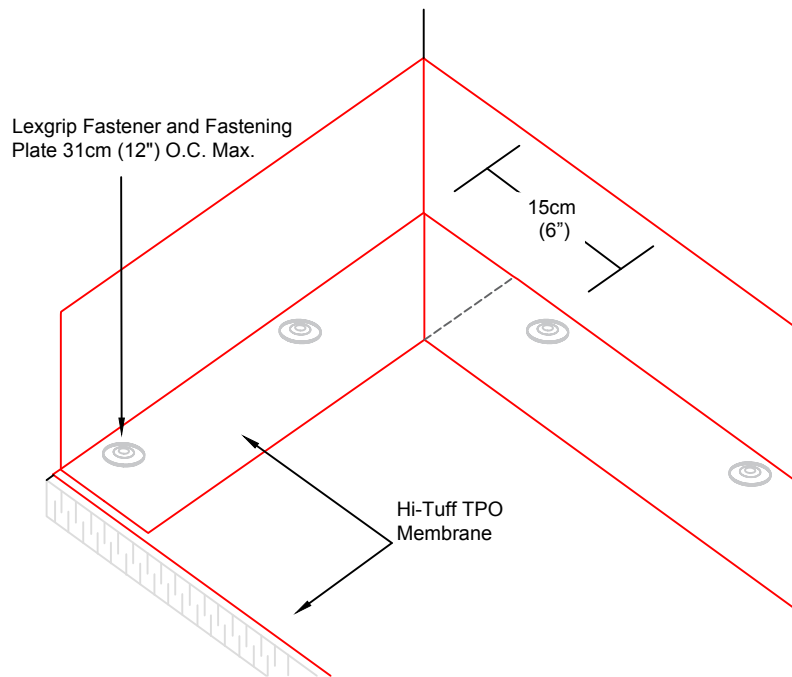


Notes:

1. Perimeter membrane fastening should be started within 15cm (6") of corner.
2. Hi-Tuff TPO Cut Edge Sealant is required on cut edges of Hi-Tuff TPO membrane.

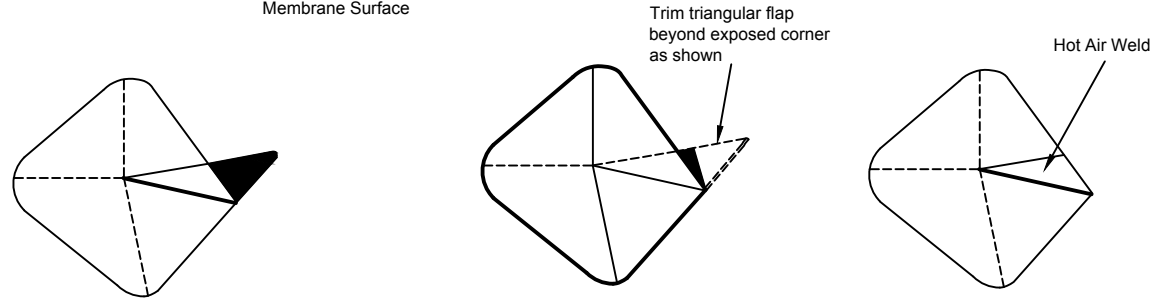

Inside Corner - Field Fabricated
ROOFING SYSTEMS DETAIL

Scale:
Date: 12/01/2024
Detail no.: H-S-301