



Step 1: Apply Hi-Tuff TPO membrane to deck & parapet

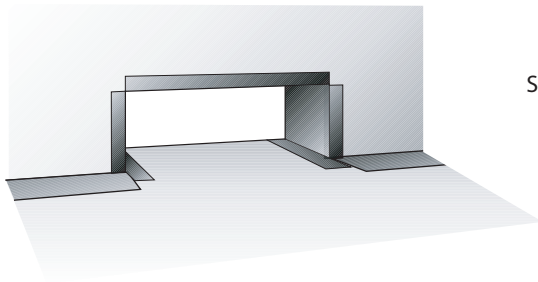

Step 2: Bond Hi-Tuff TPO Un-Reinforced membrane piece to inside of scupper.
Hot Air weld flaps that overlap Hi-Tuff TPO membrane.

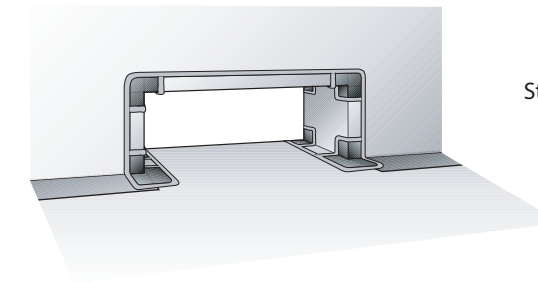

Step 3: Apply Hi-Tuff TPO Un-Reinforced membrane to corners.



Through-Wall Scupper Roofing System Detail

Scale: Not to scale
Date: August, 2016
Detail No.: H-S-325