



Step 1: Apply Hi-Pro PVC membrane to deck & parapet

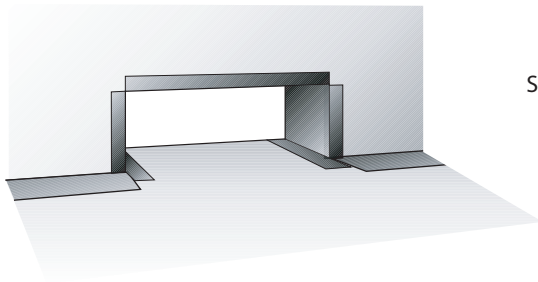

Step 2: Bond Hi-Pro PVC Un-Reinforced membrane piece to inside of scupper.  
Hot Air weld flaps that overlap Hi-Pro PVC membrane.

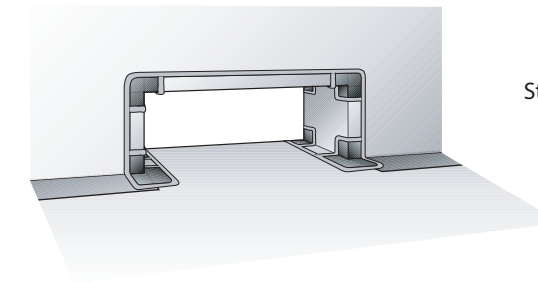

Step 3: Apply Hi-Pro PVC Un-Reinforced membrane to corners.



## Through-Wall Scupper Roofing System Detail

Scale: Not to scale

Date: August, 2016

Detail No.: P-S-325